



# PRIMER - 3D JUUMP ACE

**To launch 3D Juump Ace :** Double clic left on the application.


**To open a file, two options :** Drag & drop the file on the application icon or to the 3D view (see next page) if 3D Juump Ace is running.

**In the User Interface:** Clic on File (see next page) \ Open \ select desired file \ Open

*For more information about 3D Juump Ace and/or its functionalities, please refer to the User manuel, accessible from Help tab, in the Top menu bar of the software.*

**For technical queries, please visit us on [realfusio.com](http://realfusio.com).**


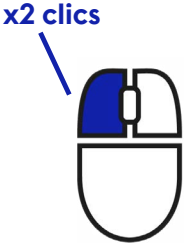

 
 

**MAIN FEATURES**

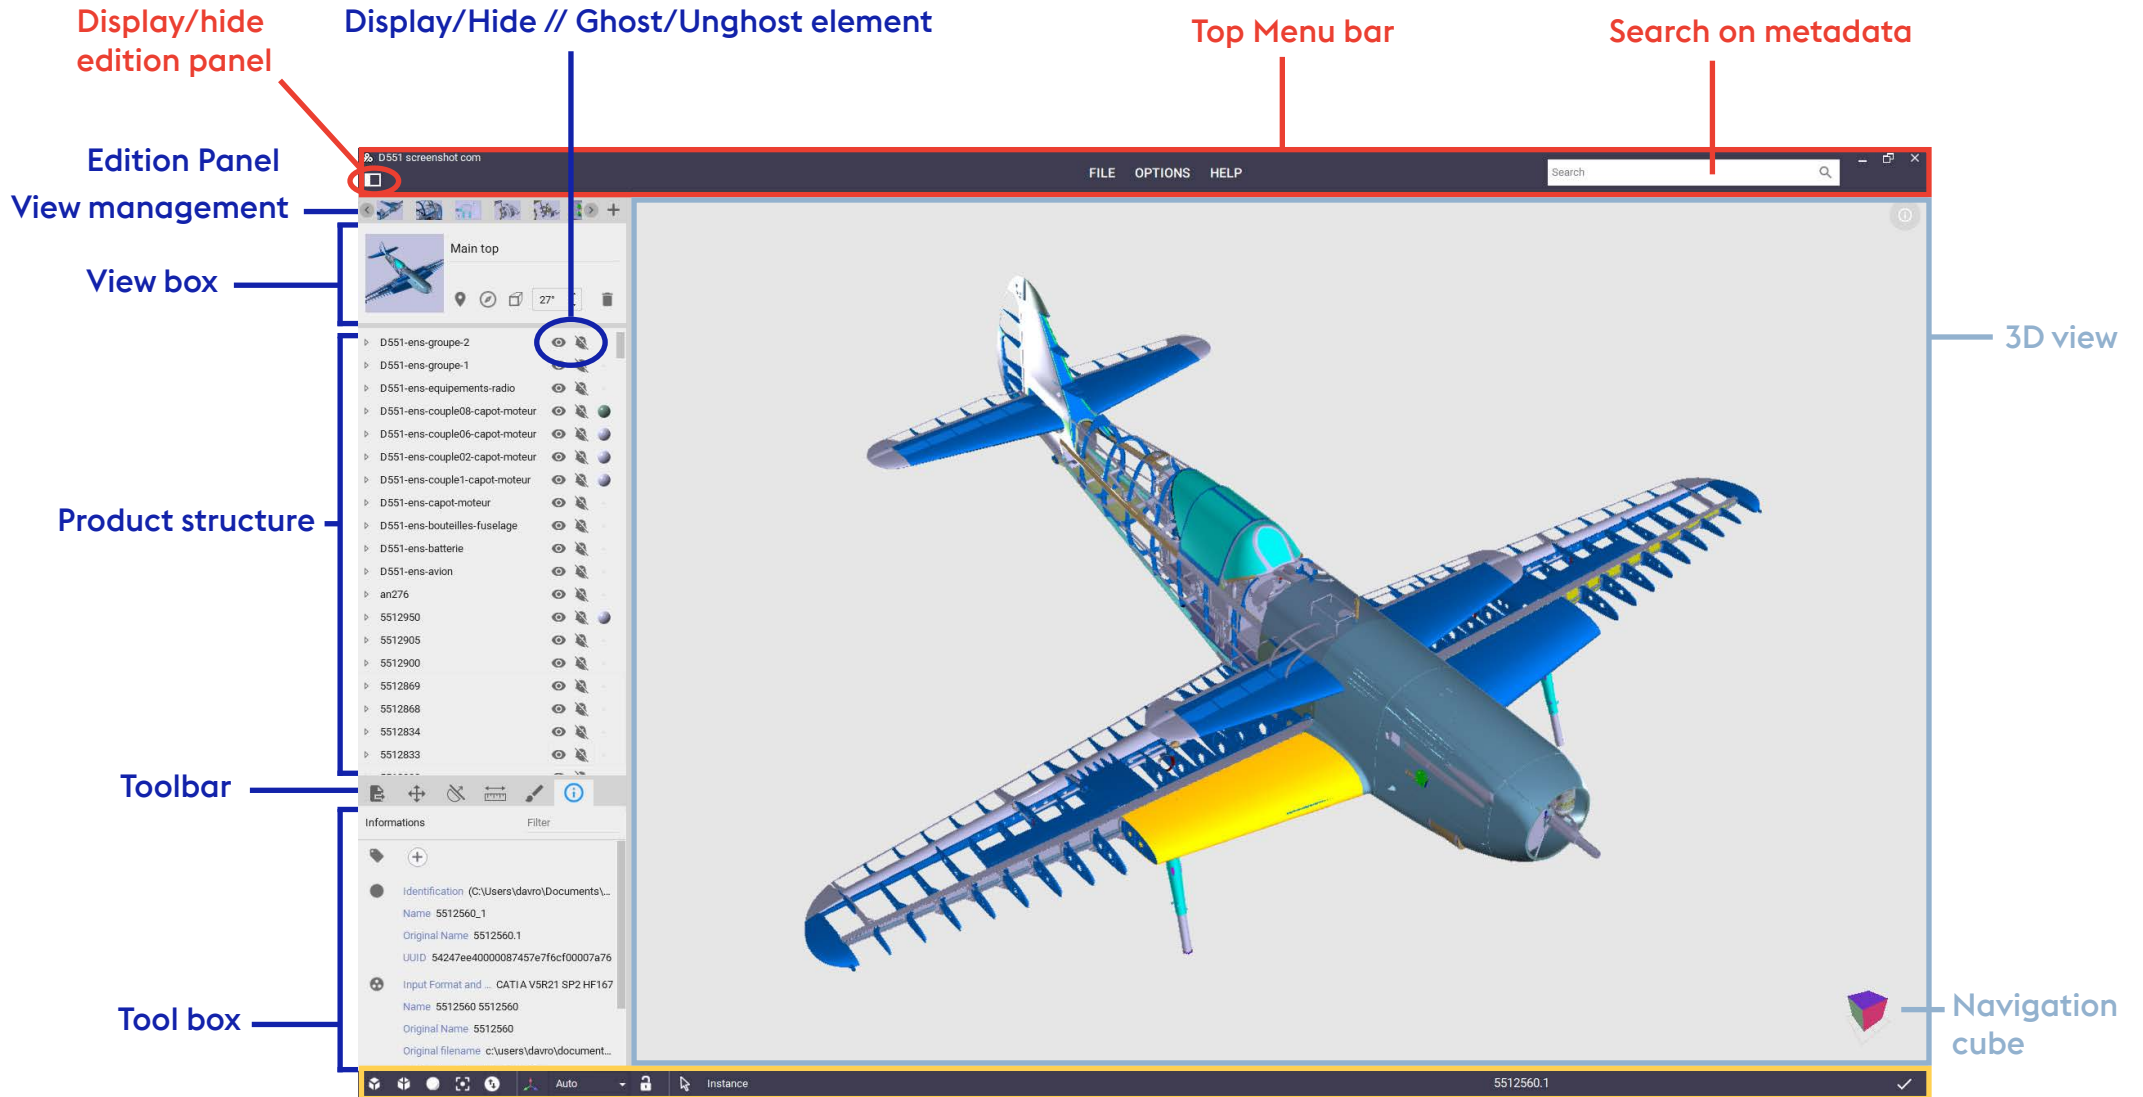






Aircraft 3D model has been provided by ©REPLICAIR 4

Status Bar

**NAVIGATION :**

					
Select element	Select element & link in the Product structure	Rotate element	Define rotation center	Zoom in Zoom out	Spacebar = Back to camera location

**TOOLBAR :**

ICON	TOOL	DEFINITION
	Export tool	Export images, text data or 3D data
	Transformation editor	Move objects along axes from frames
	Measurements	Create and edit cut planes
	Cut plane editor	Measure lengths or diameters of geometrical features, and distance between objects
	Materials	Modify elements appearance, applying another element's information or creating a new model